


User Guide

The master panel is fitted with a key switch to enable the switches, to prevent unauthorised use.

If a call is placed on the system when not enabled, it will indicate the call and omit a call tone, the call can not be answered until the panel is enabled.

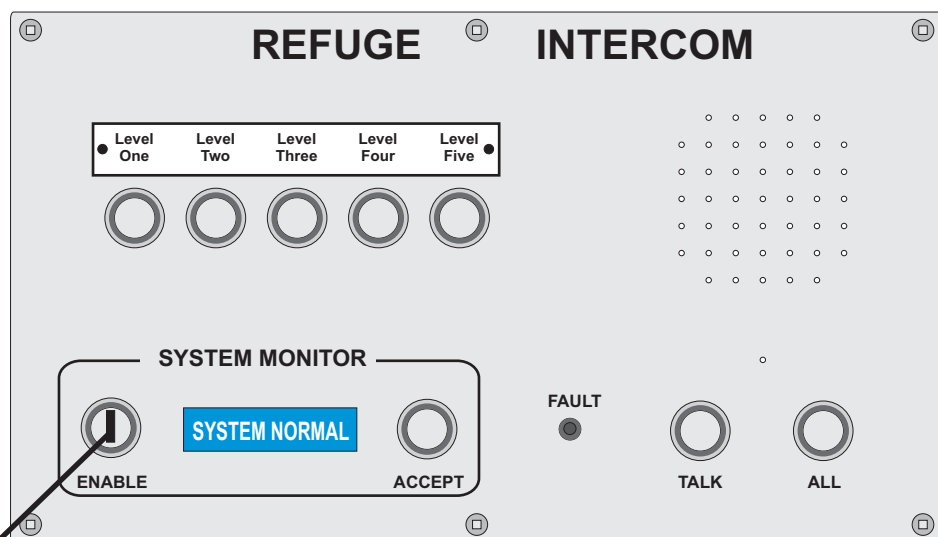


Enable key switch
Turn clockwise to enable

The associated outstation switch will flash for an incoming call, the panel will omit a call tone.

Press the switch once, the indicator will go steady, use the talk switch to talk to the outstation and release the talk switch to listen.

To finish the call, press the switch once more.

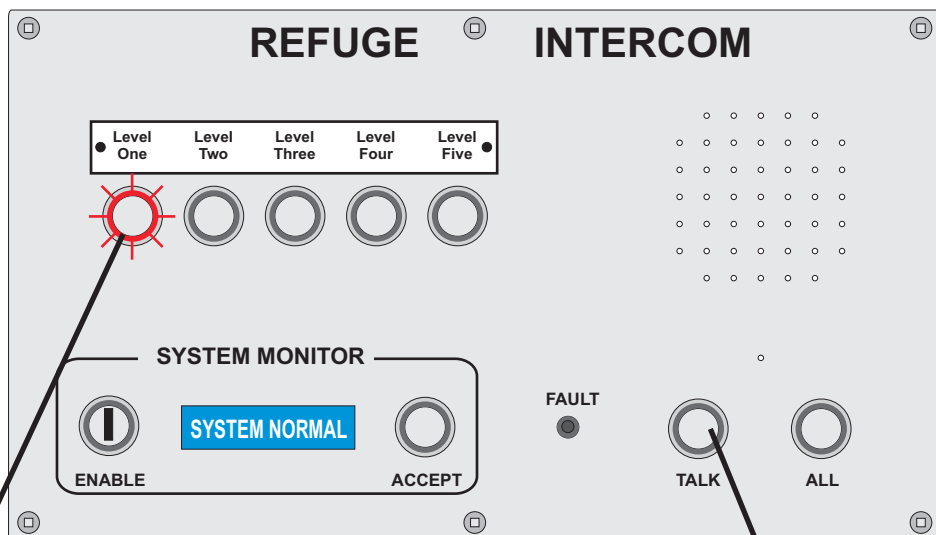


Outstation select switch will flash for an incoming call

Press the Talk switch to talk to the outstation and release to listen

Press the associated outstation switch, the indicator will go steady.

Use the talk switch to talk to the outstation and release the talk switch to listen.

To finish the call, press the switch once more.

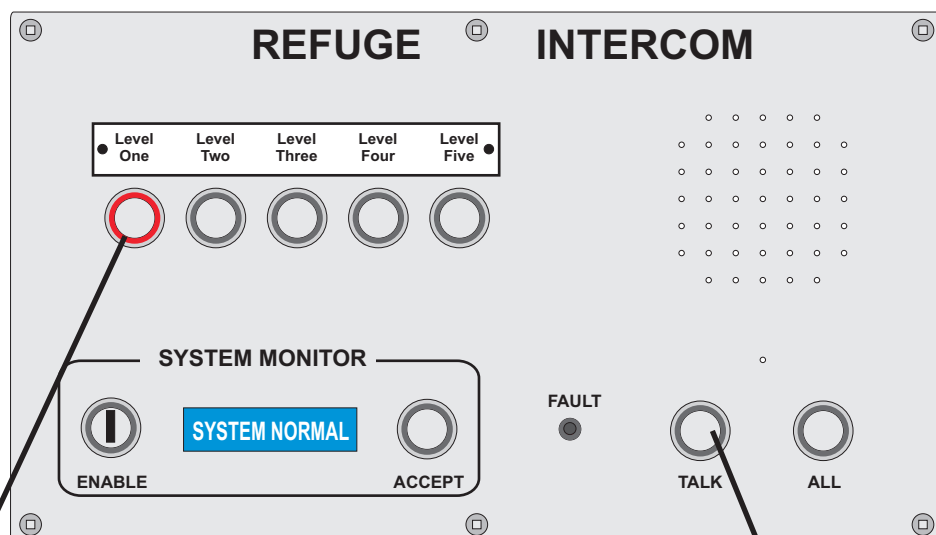


Outstation select switch, press once to make a call and press again to end the call

Press the Talk switch to talk to the outstation and release to listen

'All Call' allows the operator to make a broadcast to all outstations.

Press and hold the ALL switch and speak, when complete release the switch.

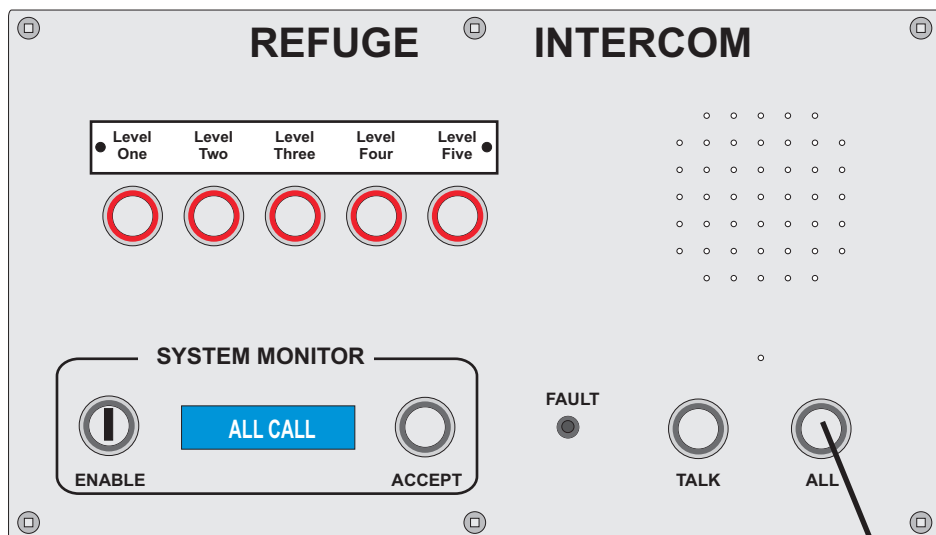


Press the ALL switch to broadcast to all outstations

The 'system monitor' display shows the current status of the system and will display any system faults.

In the event of a fault, the fault indicator will illuminate and a fault sounder will sound, press the Accept switch to silence the sounder.

Any faults should be reported as soon as possible to the maintenance company.

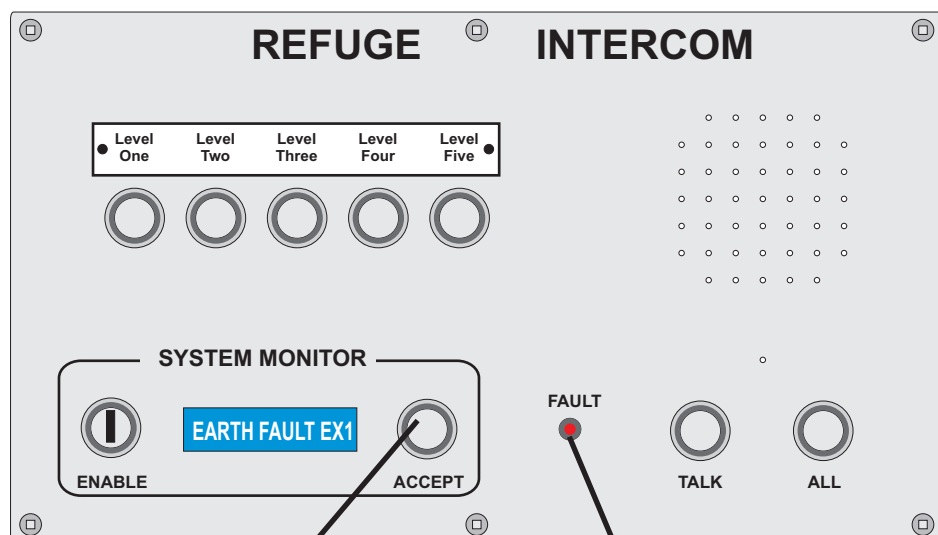

Press the Accept switch to silence the sounder

Fault light will illuminate in the event of a fault