
# Folknoll DT7550.98 CONTROLLER INPUT 16-ZONE EMERGENCY ASSISTANCE ALARMS

KEYWORDS: DT7550.98 SUBJECT: Controller INPUT 16-Zone TITLE: Emergency Assistance Alarms AUTHOR: Richard Hughes DATE PUBLISHED 20/05/2019

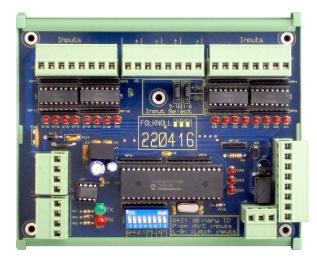

RS-485 16-ZONE INPUT CONTROLLER Accepts 16 alarm zones or 8 alarm zones with faults Diagnostic LEDs for maintenance Alarm accept output Fault signal monitoring mode Compatible with Folknoll RS-485 networking systems Compatible with Folknoll SNI IP networking

## **EMERGENCY ASSISTANCE ALARMS**

Folknoll emergency assistance alarm systems offer cost-effective, vandal resistant, **BS 8300-2** and **DOCUMENT M** compatible solutions built from standard and bespoke units. Our alarms can be combined with disabled refuge EVCS and other systems. Ideal for **SHOPS**, **OFFICES**, **HOTELS** and other **PUBLIC SPACES**.

## FOLKNOLL INPUT OUTPUT CONTROLLERS

Our IO controllers transfer alarm states and other information across a RS-485 network. Enabling remote monitoring, reporting, acknowledge of alarm activation and fault. All our IO controllers are Folknoll SNI IP network remote monitoring. Offering sitewide emergency assistance systems with centralised alarm monitoring and fault reporting on LCD panels and GUI PCs. Please contact Folknoll for more details.

## DT7550.98 CONTROLLER INPUT 16-ZONE

16 zone alarm input controller with optional zone fault monitoring.

## **TRANSFERS ALARM STATES AND FAULTS ACROSS RS-485 NETWORK**

These units can be paired with 16-zone output controllers or LCD Indicator panels to transfer zone alarm and fault states across an RS-485 network. Controllers can be "multi-dropped" on a Folknoll RS-485 network to form systems with up to 256 alarms.

## **TWO OPERATING MODES**

The controller can be configured to operate on one of two modes.

#### **STANDARD MODE**

Monitors 16 zone inputs and transfers 16 standard alarm zone states across a network.

#### FAULT MONITORING MODE

Combines 8 zone alarm states with 8 zone fault states and transfers 8 zone alarm/fault states across a network.

## ALARM, FAULT AND SYSTEM STATE INDICATORS


To aid installation, commissioning and maintenance the controller has status LEDs indicating device heartbeat, RS-485 comms. zone alarms, zone faults, etc.

# DT7550.98 CONTROLLER INPUT 16-ZONE EMERGENCY ASSISTANCE ALARMS

## **SPECIFICATIONS**

Inputs:	16 zones with common
Output:	Alarm acknowledge
RS-485 bus	2 x Folknoll RS-485 bus connections (system power+ RS-485)
Dimensions:	Width: 144mm, height: 108mm (approx.)
Power:	12Vdc24Vdc (usually supplied from battery backed system PSU or via RS-485 bus)

## **CONNECTIONS**

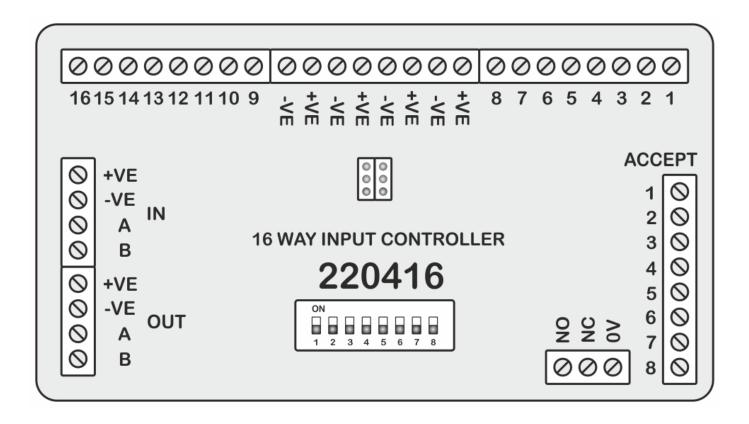

# **ABOUT FOLKNOLL**

We are a UK based systems design, manufacturing and installation company. Since 1975 we have been supplying tough, reliable, practical, alarm and control systems for the private and public sectors. All of our products and systems have been designed for easy installation and low maintenance by experienced engineers. As original manufacturers, all of our products and systems can be customised to suit your requirements. We also offer individual annotation, custom engraving and special finishes for all of our equipment.

# **GET IN TOUCH**

Please contact us for further information about our wide range of products and services and find out how we can provide a solution for you.



+44 (0) 1763 234567

enquiries@folknoll.co.uk